



# Service Manual

## 6D16 Diesel Engine

<b>FD80</b>	F32B-00011-up
<b>FD90</b>	F32B-50001-up
<b>FD100</b>	F15C-50001-up
<b>FD115</b>	F15C-50001-up
<b>FD135</b>	F15C-50001-up
<b>FD150A</b>	F24A-50011-up



# 6D16

diesel engine

## Shop Manual

(for industrial use)

### FOREWORD

This Shop Manual is published for the information and guidance of personnel responsible for maintenance of 6D16 diesel engine, and includes procedures for adjustment and maintenance services.

We earnestly look forward to seeing that this manual is made full use of in order to perform correct service with no wastage.

For more details, please consult your nearest authorized Mitsubishi dealer or distributor.

Kindly note that the specifications and maintenance service figures are subject to change without prior notice in line with improvement which will be effected from time to time in the future.

Applicable models

6D16

6D16-TLE

### GROUP INDEX

#### HOW TO READ THIS MANUAL

GENERAL .....	<b>00</b>
ENGINE.....	<b>11</b>
LUBRICATION .....	<b>12</b>
FUEL AND ENGINE CONTROL .....	<b>13</b>
COOLING.....	<b>14</b>
INTAKE AND EXHAUST .....	<b>15</b>
ELECTRICAL SYSTEM .....	<b>54</b>
SPECIAL EQUIPMENT .....	<b>61</b>